
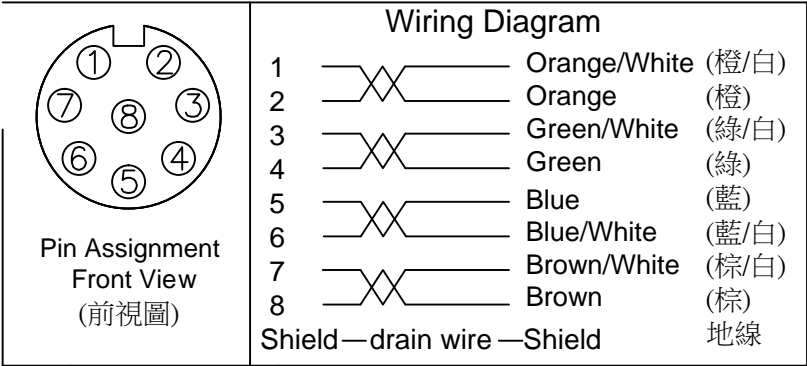


REV.	DESCRIPTION	DATE
A	ISSUE	Dec/23/2013
B	Modify cable length.	Dec/25/2013
C	Add note.	Mar/20/2014
D	Modify P/N.	Sep/25/2014
E	Modify connector to shielding type.	Nov/12/2014
E1	Change ring nut to shielding type.	Nov/25/2014

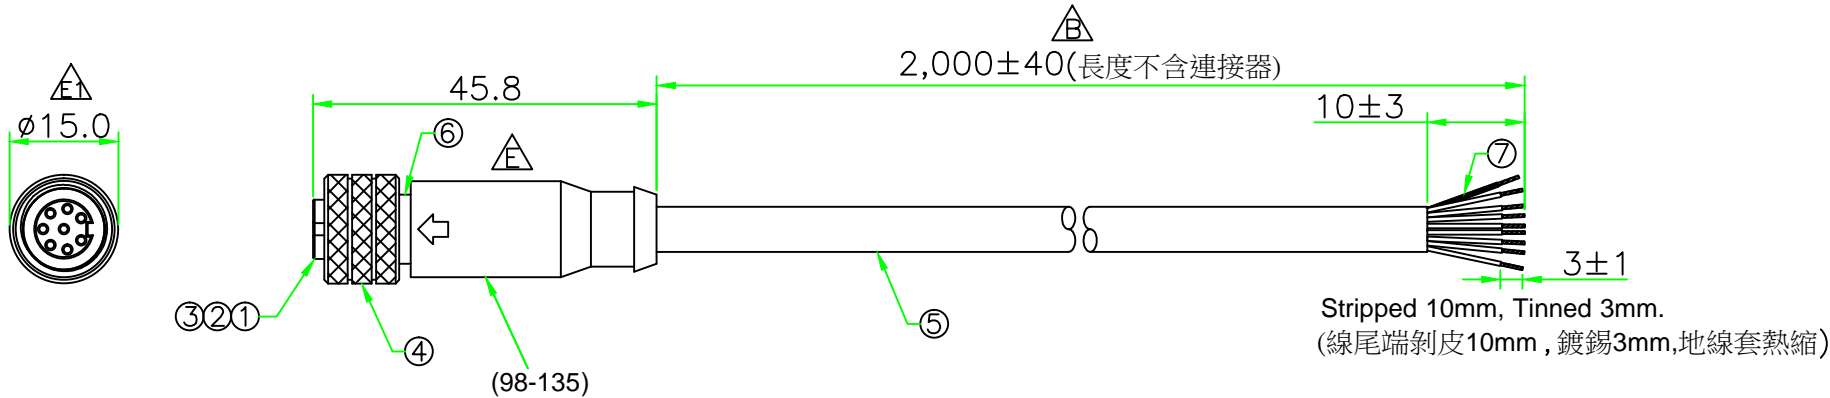

7	TUBE	Heat shrink tube.	BLACK	1	
6	SHIELD	Brass, Nickel Plated.		1	
5	CABLE	CAT5E FTP 24AWG x 4 PAIR + AL/MY + Drain wire.	BLACK	1	WAC2B0026
4	RING NUT	Brass, Nickel Plated.		1	M12S-RN-D985
3	O-RING	Viton.	BLACK	1	M12-O-VK
2	CONTACT	Brass , Female pin ,6 u" Gold plated .		8	AASPF-1008-0.8
1	CONNECTOR	M12 A-coding Female connector insert. Nylon+GF.	BLACK	1	M12A-08F
No.	PART NAME	DESCRIPTION	COLOR	Q'TY	REMARKS

	UNIT: mm	TITLE	M12 A-Coding 8P Female Molded Cable Ass'y
SCALE	1:1	P/N:	K129351003
UNLESS OTHERWISE SPECIFIED TOLERANCES: X \pm 0.25 XX \pm 0.1 XXX \pm 0.05 ANGLE \pm 1 \times	REV.	SHEET	DWG.NO:
E1	1/1	T128391	

Customer: FLIR

DR. *Stanley*
CH. *ERIC*
AP.